

CASIO®

PRO TREK Smart Quick Operation Guide



WSD-F20



WSD-F30

PRO TREK Smart

Wear OS by Google

GO HARDER
WITH A WEARABLE MAP

PRO TREK Smart Quick Operation Guide

Wear OS by Google

⌚ Getting Ready to Use the Product

Depending on factors such as differences in products and software versions, the screen displays and operations may differ from those shown in this Quick Operation Guide. This Quick Operation Guide shows typical screen displays and operations.



- The "Wear OS by Google™" app must be installed.
- Ensure that the watch is fully charged.



Procedures on the smartphone

Supported mobile phones (as of December 2018)

- Android™ 4.4 or later (excludes Go editions)
- iOS 9.3 or later Refer to the User's Guide for details.
- * Some functions are not available when the phone is connected to an iOS device.

- Install the "Wear OS by Google" app.
- * Update the Google Play Developer service to the latest version.**
- * Update the Google app to the latest version.**
- * Install the CASIO MOMENT SETTER+ app.**
(Use the latest version. Older versions for Android Wear™ 1.x cannot be used.)

* Android-only procedure. CASIO MOMENT SETTER+ is recommended, but is not essential.




Procedures on the watch

1



Press the **Power button** on the watch.

2

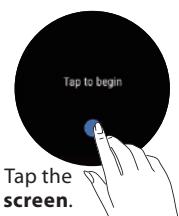

Tap the **screen**.

3



Select the **language to be used**.



⌚ Pairing the watch with your smartphone ① Android settings



Activate the Bluetooth® connection on your smartphone.


- Place the smartphone to be paired close to the watch (1 m or closer recommended).
- This description shows typical screen transitions.

1




Launch Wear OS by Google on the smartphone.

2

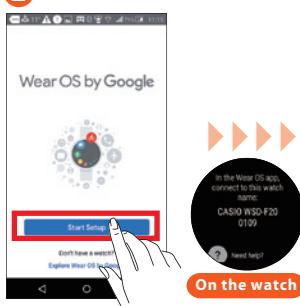


Tap "**SET IT UP**".

3

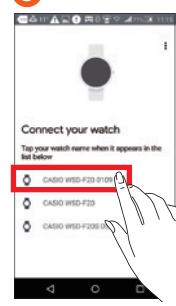


Tap "**CASIO WSD-F20**".

4

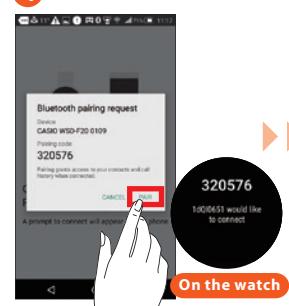

When the pair settings screen appears, check the passkey and tap "**PAIR**".


5

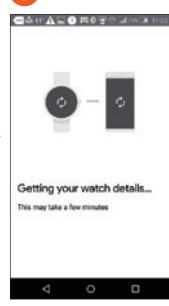

Getting your watch details may continue for some time.


⌚ The same passkey shown on the smartphone screen appears on the watch screen.

6

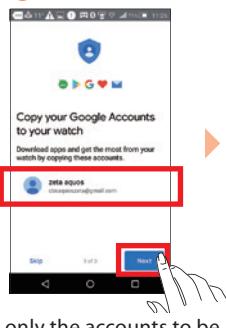

Set only the accounts to be synchronized to **ON** and then tap "**Next**".

7

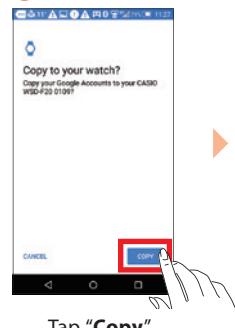


Tap "**COPY**".

8



Enter the password and tap "**SIGN IN**".

9

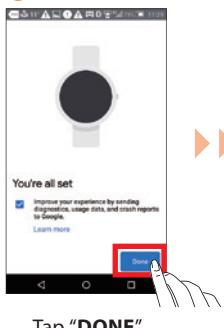

Tap "**DONE**". If a confirmation screen then appears, follow the instructions provided on the screen.

10



Connection is completed.



Always make copies of the accounts. Important product auto updates will not function.

To ensure that the product is fully functional, configure the **settings on the watch** in "Pairing the watch with your smartphone ②".

PRO TREK Smart Quick Operation Guide

Wear OS by Google



Pairing the watch with your smartphone ① iPhone settings

Important

- Activate the Bluetooth® connection on your smartphone.
- Place the smartphone to be paired close to the watch (1 m or closer recommended).

1 Launch Wear OS by Google on the smartphone.

2 Tap "Start setup".

3 Tap "Accept".

4 Tap "Enable".

5 Tap "OK".

6 Tap "WSD-F20".

7 Tap "Pair".

Once the same code to connect shown on the watch appears, tap "Confirm".

Getting your watch information may continue for several minutes.

8

9

10 Tap "Sign in". If "Continue as (account name)" is displayed, proceed to step ⑯.

11 Tap "Use another account".

12 Tap "More options".

13 Tap "Create account".

Follow the on-screen instructions to enter your data and create the account.

14

15 Tap "Continue as (account name)".

16

17 Enter the password for the created account and tap "Sign in". If a confirmation screen then appears, follow the instructions provided on the screen.

18 Tap "Done".

19 Connection is completed.

To ensure that the product is fully functional, configure the settings on the watch in "Pairing the watch with your smartphone".

⚠ You must create a login account in Google. Auto update will not function without account information.

PRO TREK Smart Quick Operation Guide

Wear OS by Google



Pairing the watch with your smartphone ②


Watch settings

1 Run the "Tutorial" displayed by Google.

- When the watch is paired with a terminal and ready to use, a tutorial appears several times on the watch screen.
- You should **follow the steps in the tutorial at least once**, as it includes important steps in preparing the OS.



Swipe up
on the screen.

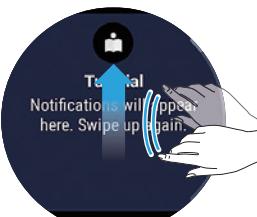


Swipe up
on the screen.



Follow the on-screen
instructions.


* After the software update, the "Tutorial" changes in the steps below. * The software is automatically updated.

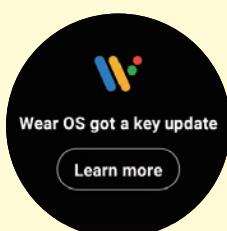

Tap "Learn more".



Swipe the screen to check the display. Swipe back to return to the watch display. Check the display in all four directions.

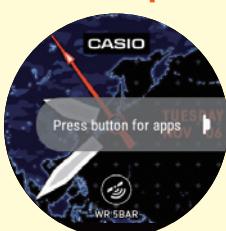

Press the Power button to display the App Menu. Use the Power button to return to the watch display.



Tap and hold the center of the screen to open the watch face selection screen. Tap to return to the watch display.

2 Update to the latest versions of the Casio apps.

To use an iPhone, a Wi-Fi connection is required.



Press the **Power button** on the watch.




Swipe down on the screen.
Tap "Play Store" in the App Menu.



Swipe down
on the screen.



Tap "My Apps".

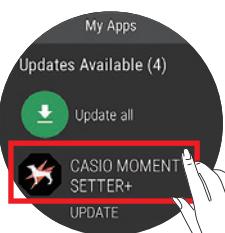

A list of the apps that can be updated appears. "CASIO MOMENT SETTER+" must be updated. Updating the other apps also is recommended.

3 Configure the location information settings in "Smartphone and watch".

Unless you plan to use "Activity", "Location Memory", "Location" or "Traveler", there is no need to set the "location information".



Swipe down
on the screen.



Tap "Settings".


* Screens differ depending on the software version.



After the
software
update



In the "Settings" screen, swipe up and tap "Connectivity".

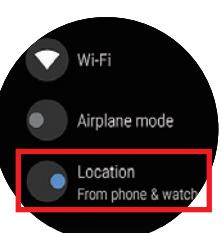

Check that "From phone & watch" under "Location" is enabled.

PRO TREK Smart Quick Operation Guide

Wear OS by Google

This follows on from step ③ in "Pairing the watch with your smartphone ②".




Pairing the watch with your smartphone ②

Watch settings

4

In "Apps", enable all the "Permissions" for Casio apps.


- Unless you plan to use "Activity", "Location Memory", "Location" or "Traveler", there is no need for "location information" permissions.
- If you do not plan to use "Location Memory", there is no need for "Microphone" permissions.
- If you do not plan to use "Traveler", there is no need for "Calendar" permissions.

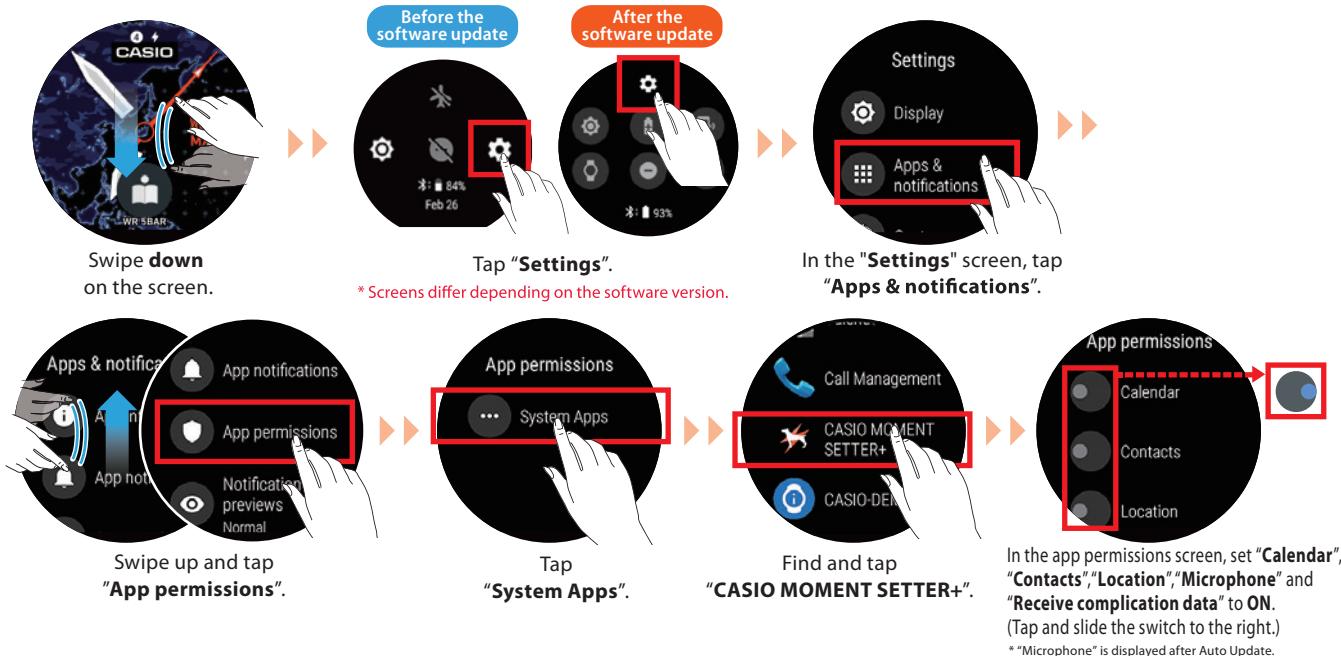

5

Enable the "Save daily activity records" setting.

If you omit this step, you will not be able to use "TOOL: My Graph".

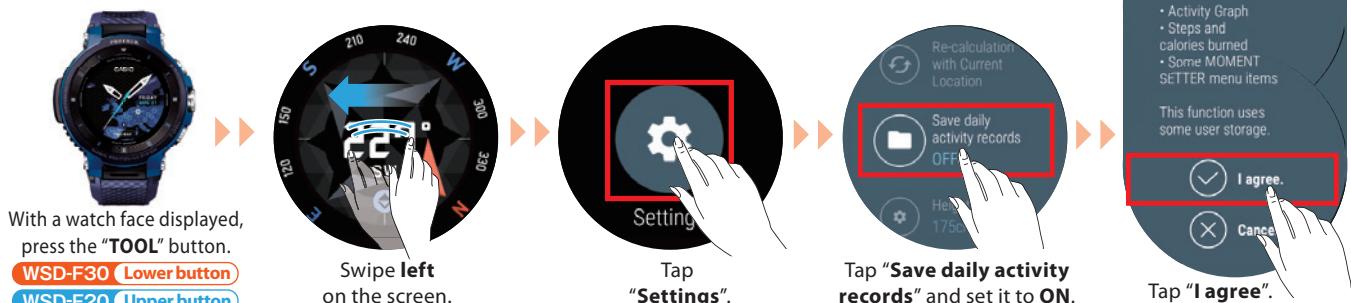

6

Enable the "Save Daily Location Info" setting.

If you omit this step, you will not be able to use the "Route Display", "Check History" or "Revisit" functions in "Location Notes".



PRO TREK Smart Quick Operation Guide

Wear OS by Google


Main Screen Transitions

Before the software update

You can operate this smartwatch by swiping its touchscreen with your finger.

Notifications

Configure the various notifications.

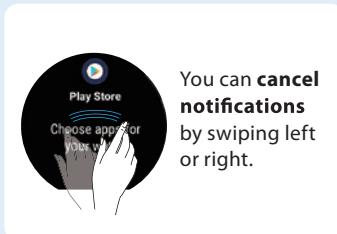

You can **cancel notifications** by swiping left or right.

Watch face settings

These watches **come with Casio original watch faces** that you can switch between whenever you like.




*See "Changing/Adding original watch faces" for details.




Settings

You can use this setting to configure the "Brightness Adjustment", "Airplane Mode", "Settings" and "Silent Mode".

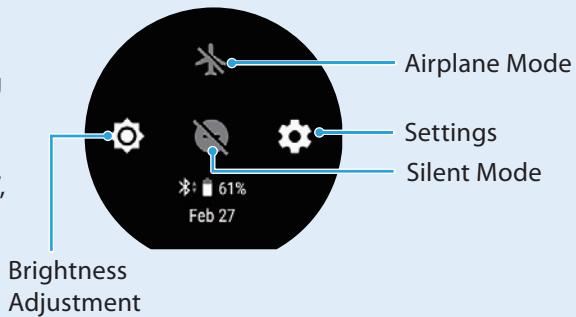

App Menu


This screen displays a list of the available apps.

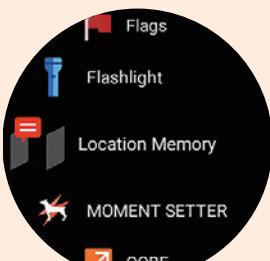

* See "Launching/Adding apps" for details.

Google Assistant™

The Voice Search screen is displayed.

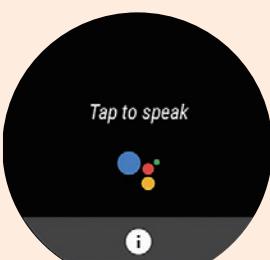

* See "Basic voice operations" for details.


PRO TREK Smart Quick Operation Guide

Wear OS by Google

Main Screen Transitions

After the software update

You can operate this smartwatch by swiping its touchscreen with your finger.

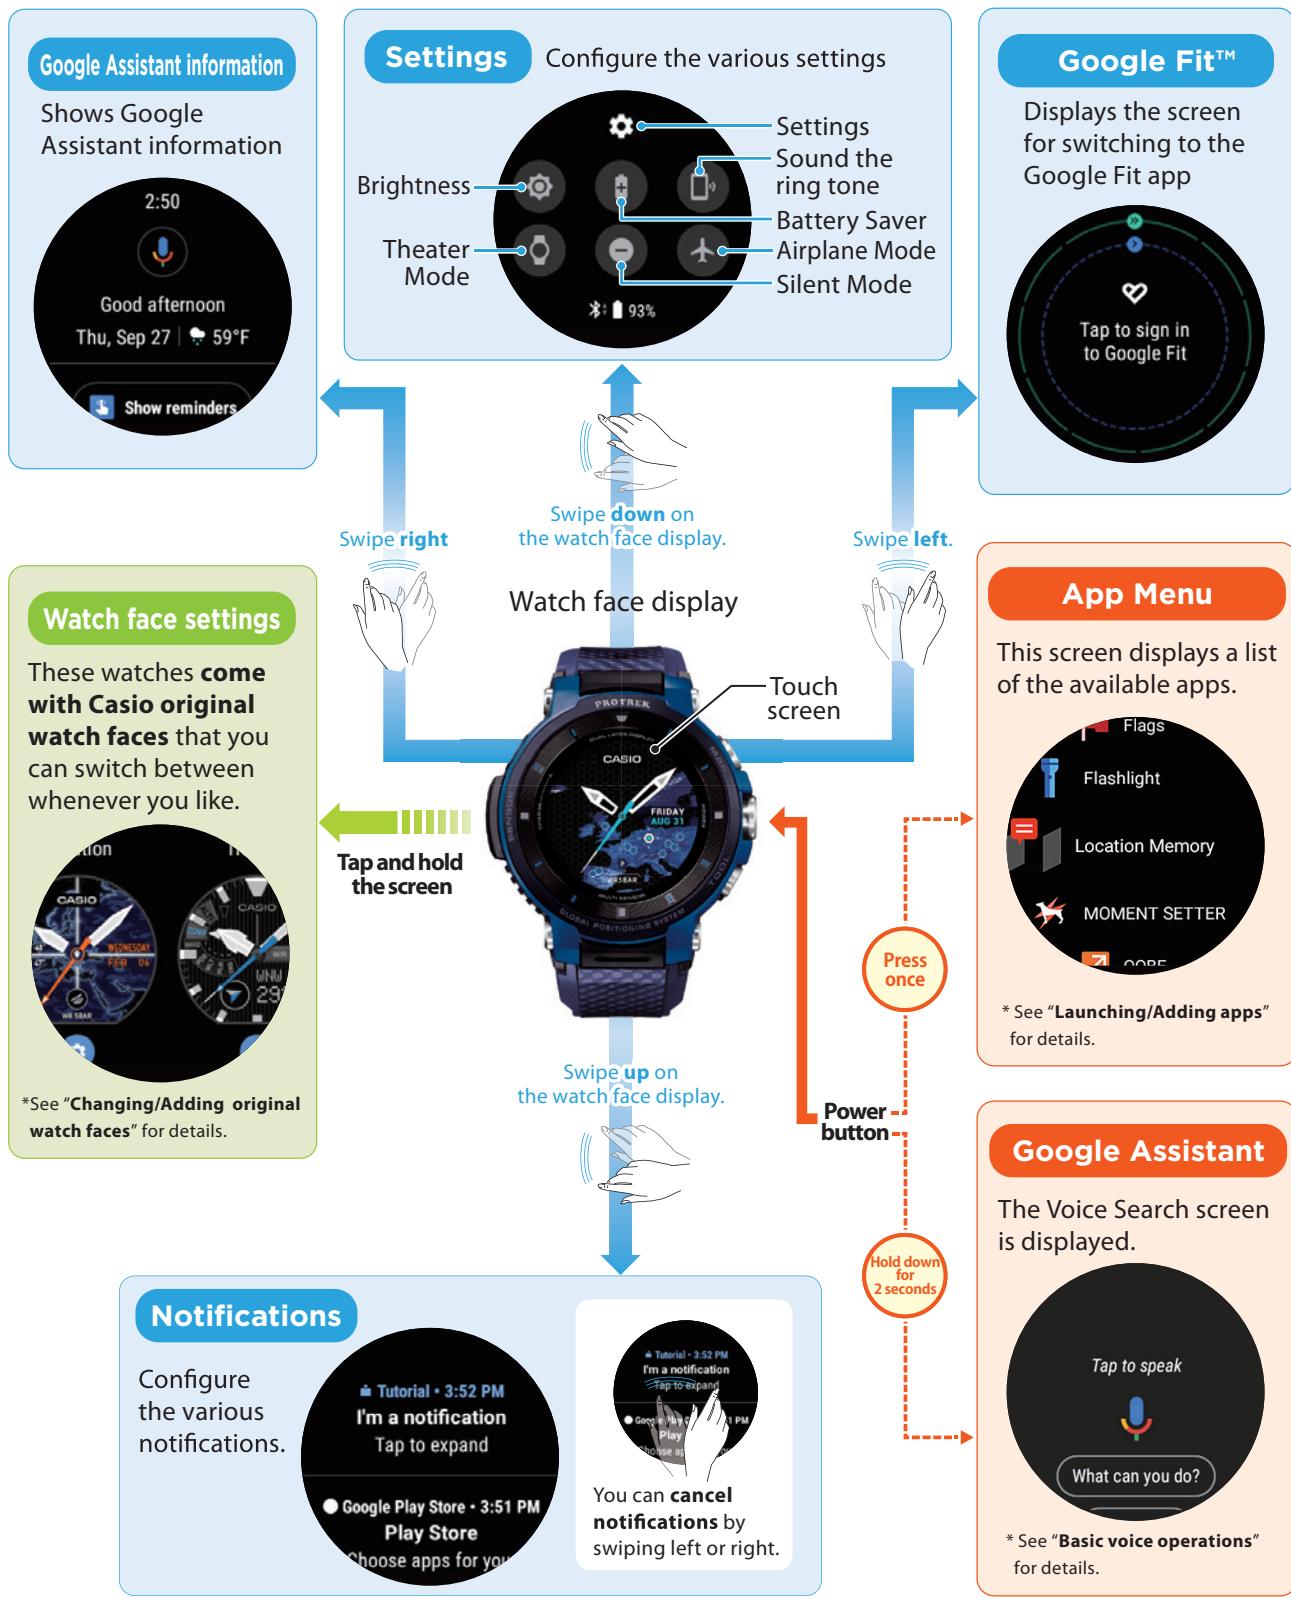

PRO TREK Smart Quick Operation Guide

Wear OS by Google



Launching/Adding apps


Launching an app



With a watch face displayed, press the Power button **once**.

Tap the app you want to launch.

By **holding your finger** on the app so that a star ⭐ appears next to the app, you can **assign the highest priority** to the app.

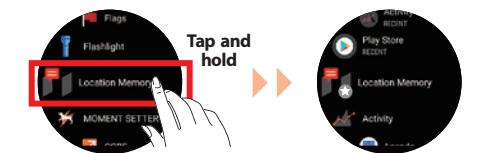


Adding an app

To add an app, you need to install the app on both the smartphone and the watch. (Installation on the smartphone may not be necessary for some apps.)


Procedure from the smartphone

- 1 Categories screen
- 2

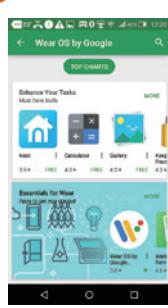

In the **Play store** category screen, swipe up and tap "**Wear OS by Google**".

Procedure from the watch

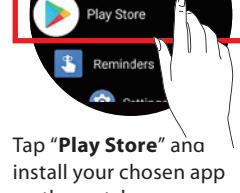

Tap "**Play Store**" and install your chosen app on the watch.

Install your chosen app.



Basic voice operations



You can engage in activities such as the following by holding the watch up and **giving spoken instructions**.

- Writing memos and setting reminders, alarms and the timer
- Checking your schedule
- Replying to e-mail and SNS messages
- Checking for information on the weather, sport, movies, etc.
- Looking up the meanings of words and converting currency

The supported functions differ depending on the platform, device and country. You cannot use e-mail or send SNS messages with an iPhone (iOS).


To set an alarm <Only one alarm can be set at 7:00 am>

- 1




With a watch face displayed, swipe **right** on the screen or **hold down the Power button for at least 2 seconds**.

- 2

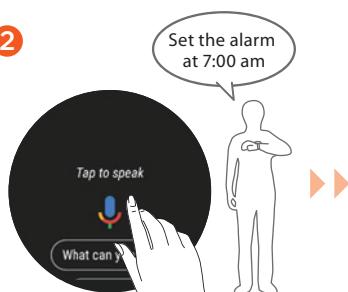

Tap the **microphone icon**.

- 3

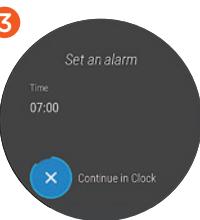

Set an alarm

Time

07:00

Continue in Clock

- 4



When the set time is reached, the watch displays the **alarm screen** and **vibrates** to let you know.
* The watch alarm does not emit a sound.



Changing/Adding original watch faces

Original watch faces

These watches **come with Casio original watch faces** that you can switch between whenever you like.



NEW

[Frontier]

Shows a map graphic as the time display background, with colors to indicate places you have visited. It shows how much fun it is to travel the world.
* WSD-F30 only



Outdoor



Daily

UPDATE

[2-layer]

Choose between two styles:
Outdoor or Daily.

* WSD-F30 screen



[Location]



[Traveler]



[Multi]



[World time]



[Authentic]



[Place]



[Journey]

Changing the watch face

① Watch face display



With a watch face displayed, tap and hold the center of the screen.

② Select an option from the "Favorites".




In the "Favorites" list, choose a screen you like and tap to set it.

Adding a watch face (on the watch)



Tap "See more watch faces".

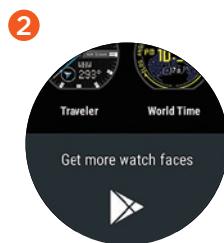

Swipe up and tap "Get more watch faces".



Select the watch face you want to add and install it.

Adding a watch face to "Favorites" (on the watch)

You can add a watch face to "**Favorites**" by selecting the watch face from **See more watch faces**.



Tap "See more watch faces".



You can **swipe up or down** to choose your preferred face.

PRO TREK Smart Quick Operation Guide

Wear OS by Google



Timepiece Mode (WSD-F20)
Multi Timepiece Mode (WSD-F30)

Setting/Canceling

These modes use a monochrome LCD to show the time. Because these modes disable the GPS and communication functions, they use only a tiny amount of power and are very useful when you want to conserve as much battery power as possible but still display the time.

WSD-F20 Setting Timepiece Mode

-
-
-
-

Press the Power button once to display the App Menu.
Tap "Timepiece".
Tap .
The watch is set to "Timepiece Mode".

WSD-F30 Setting Multi Timepiece Mode

You can choose either Outdoor style, which shows the altitude and atmospheric pressure, or Daily Style.

-
-
-
-

Press the Power button once to display the app list.
Tap "Multi Timepiece".
Tap to select the style.
Swipe up and tap for Start.
The watch is set to "Multi Timepiece Mode".

Canceling the Modes

-
-
-

Hold down the Power button for roughly 2 seconds.
The watch restarts.
The watch displays a watch face.



Functions available without a smartphone connection

The functions shown below can still be used when the watch is not paired with a smartphone. (However, to reset the watch so that it can be used, you will need a smartphone.)

• TOOL functions

(Compass, Altimeter, Barometer, Sunrise/sunset time, Tide Graph, My Graph)

• Checking the time and date

• Setting an alarm

• Using the stopwatch

• Using the timer

• Counting the number of steps

• Changing the watch face

• Setting the watch to Airplane Mode

• Listening to music on your watch

* Only if a Bluetooth® headset is connected to the watch and the music files are already installed

See "Wear OS by Google Help" for details. <https://support.google.com/wearos/>